


13 STARTER , ALTERNATOR AND THEIR FASTENING PIECE

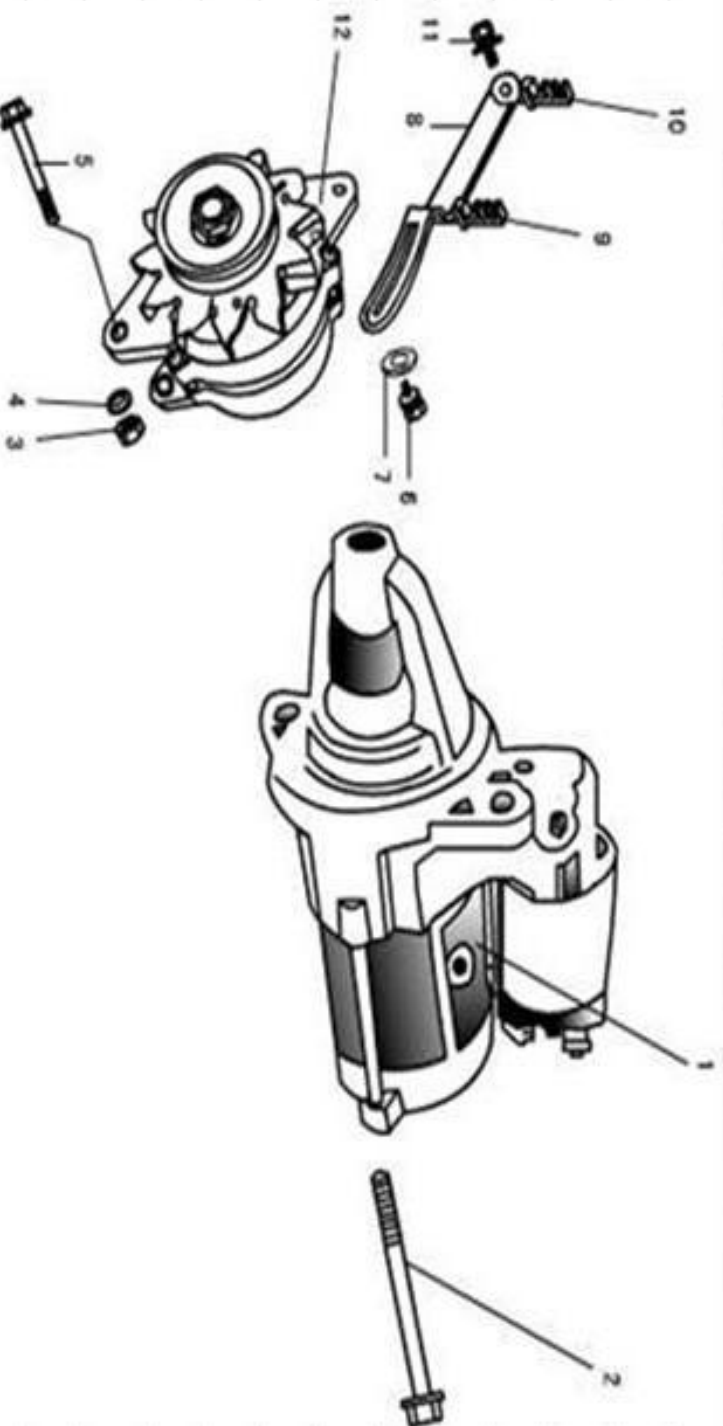

| No. | Code name | Description | Qty |
|-----|-----------------------|--|-----|
| 1 | LJ368Q - 3708010 | Starter assembly | 1 |
| 2 | LJ368Q - 1000068 | Starter clamp bolt with Shouldered tap | 2 |
| 3 | QTB15 | Hexagon nut M8 - 8 | 1 |
| 4 | GB/T93 - 1987 | Spring washer 8 | 1 |
| 5 | 270Q - 02203A | Adjusting bolt | 1 |
| 6 | GB/T9074.15 - 1988 | Bolt assembly M8x25 | 1 |
| 7 | QTB30 | Thick washerφ24xφ8.5x3 | 1 |
| 8 | 270Q - 25010A | Ally arm Weld assembly of alternator | 1 |
| 9 | 270Q - 25001 | Second fixed swift | 1 |
| 10 | 270Q - 25020 | First fixed swift (insert) | 1 |
| 11 | GB/T9074.15 - 1988 | Bolt assembly M8x20 | 1 |
| 12 | LJ462Q - 1 - 3701010D | Silicon rectification generator assembly | 1 |